

FORM NUMBER: 234-0208-00

PRINT DATE: AUGUST 1984

SUPERSEDES: N/A


owner / user instructions

FOR SUSPENSION BARS
AND WALL STRETCHER HOOKS

MODELS

557

559

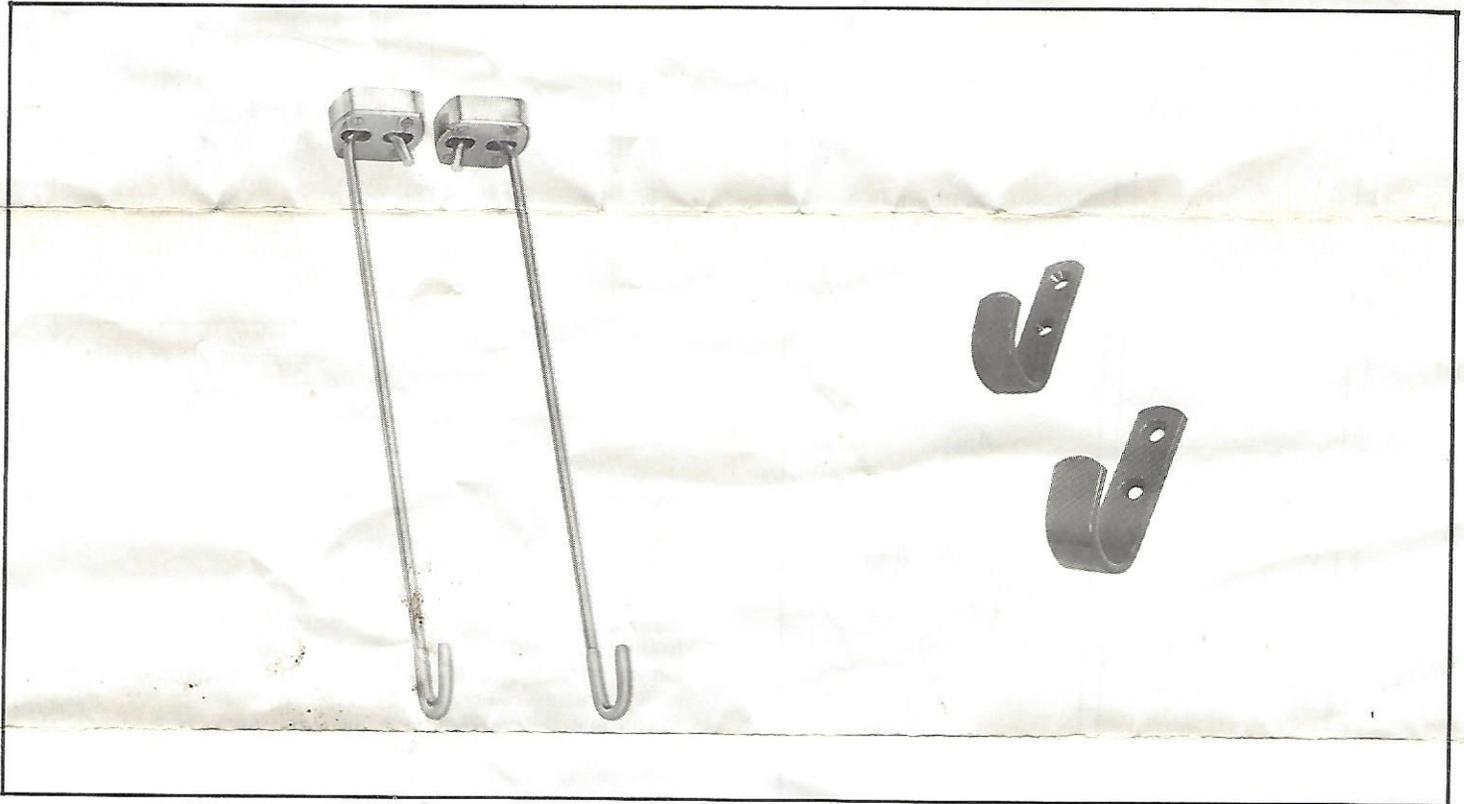

IMPORTANT

THIS MANUAL HAS BEEN PREPARED TO INSTRUCT USERS IN THE SAFE AND EFFICIENT USE OF THE FERNO MODEL 557 SUSPENSION BARS AND MODEL 559 WALL STRETCHER HOOKS.

MODELS 557 AND 559 ATTACH TO THE CEILING/WALL OF AN EMERGENCY VEHICLE FOR THE PURPOSE OF SUSPENDING FERNO MODELS 10, 11, 12, 12-E, 12-B, 108-A, AND 108-AF SERIES EMERGENCY STRETCHERS TO TEMPORARILY INCREASE PATIENT TRANSPORT CAPABILITY OF THE VEHICLE.

THESE INSTRUCTIONS ARE PRODUCT USE GUIDELINES ONLY. THEY ARE NOT OFFERED AS MEDICAL RECOMMENDATIONS OR INTENDED TO DICTATE MEDICAL CARE PRACTICES, PROCEDURES, OR TECHNIQUES. CONSULT YOUR LOCAL MEDICAL DIRECTOR, ADVISOR, OR MEDICAL AUTHORITY FOR SPECIFIC MEDICAL CARE TECHNIQUES OR PRACTICES AS RELATED TO THE USE OF THIS EQUIPMENT.

EACH USER SHOULD READ THESE INSTRUCTIONS BEFORE INSTALLATION AND USE, THEN PRACTICE USING THE SUSPENSION BARS AND WALL STRETCHER HOOKS BEFORE PLACING THEM IN REGULAR SERVICE.

ESTABLISH REGULAR INSPECTION PROCEDURES AND RESPONSIBILITIES TO INSURE PROPER MAINTENANCE AS DESCRIBED.

RETAIN THIS MANUAL FOR FUTURE REFERENCE. INCLUDE IT WITH THE SUSPENSION BARS AND WALL STRETCHER HOOKS IN THE EVENT OF TRANSFER TO NEW OWNERS OR USERS.

SERIAL NUMBER

DATE RECEIVED

PURCHASED FROM

PRACTICE COMPLETION DATE

USED ON VEHICLE NUMBER



FERNO

A Division of
FERNO-WASHINGTON, INC.

70 Weil Way
Wilmington, Ohio 45177-9371
Phone: 513/382-1451
Telex: 214282 FERNOWASH WIMI